

How to operate Emax EVOlution



1 Names of parts



When 〈⁄ 〈 is turned ON/OFF, the motor connected to motor connector A/B will rotate/stop. * 〈 and 〈 cannot be operated simultaneously.



- 1. Loosen the ring and remove the tool.
- 2. Replace the tool and tighten the ring until a click sound is produced.





Turn speed control volume completely to the left.
Switch ON the power supply.



* Please make sure that the speed control display is set to



How to start/stop the motor and adjust the rotation speed

* When motor connector A is connected to the motor.

—To start—

1. Press 🐼 or the motor smart switch. The motor starts to rotate.



2. When the motor is rotating, press or the motor smart switch. The motor stops rotating.

— To adjust the rotation speed —

1. Turn the speed control volume to adjust the rotation speed.





-FIXPEED function-

FIXPEED allows everyone to set the speed of the motor in advance. The speed that is frequently used can be easily set at the touch of a button.



NAKANISHI INC. 🖬

www.nakanishi-inc.com

700 Shimohinata, Kanuma, Tochigi 322-8666, Japan

Contents are subject to change without notice.

NSK America Corp

www.nskamericacorp.com

1800 Global Parkway, Hoffman Estates, IL 60192, USA



Ultra-precision brushless micro-grinder Emax EVOlution

Simple setup/operation guide

* See attached instruction manual and reverse side for details and safety precautions.

Excellent operability that makes the best use of advanced high performance

EVOlution

Emax



NAKANISHI INC. al www.nakanishi-inc.com 700 Shimohinata, Karuma, Tochigi 322-9565, Jepan Contents are subject to change without notice.

NSK America Corp www.nskamericacorp.com 1800 Global Parkway, Hoffman Estates, IL 60192, USA